


Ⓐ Instead of Slots Drill 3.5mm

Ⓑ Instead of Slots Drill & Tap M3
(Do not pocket for M3 Nuts)

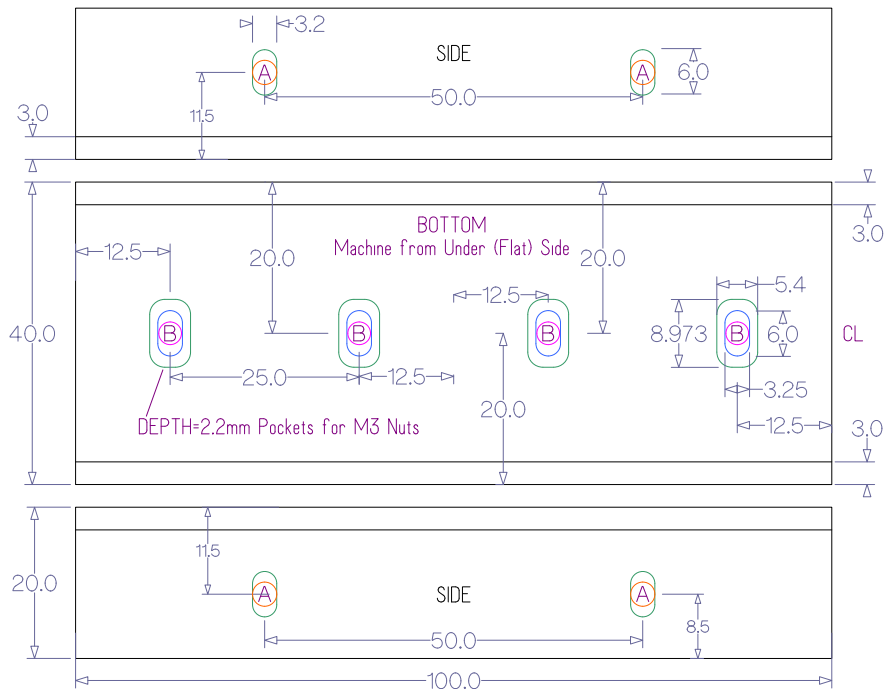

LENEAR RAIL U-CHANNEL EXTRUSION SUPPORT for SECURING INTO PREDATOR CHANNELS